

INSTRUCTIONS FOR USE

Three Flag System Installation


1. Drill a 3/16" hole 2 1/8" down from the top and 1 1/2" from the side.

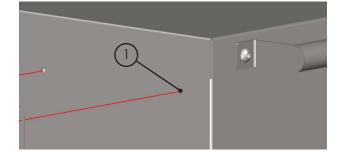

- 2. Line up flag system base to top right hole and, using a level, use it as a template to mark where the other three holes need to be drilled.
- 3. Set flag system base to the side and drill the last three holes.

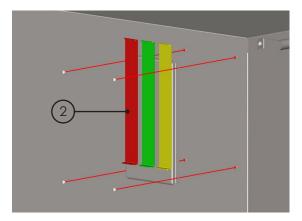

4. Line up all 4 holes and install screws into holes the put nuts on from the inside and tighten.

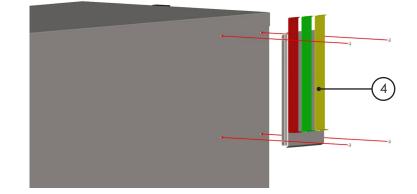

1

MAC Medical, Inc. Printed in USA - January 2023 Publication No. IFU-184 Rev A





Corporate Office 200 Admiral Weinel Blvd. Columbia, Illinois 62236 Manufacturing Plant 820 South Mulberry Street Millstadt, IL 62260

Phone: 618-476-3550 • Toll Free: 877-828-9975 • www.macmedical.com